



**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	OPC		Smart
	Sleep		Sleep
	Select		Shift + Ok
	[i+]		Info
	[[<>]]		Format
	AV Mode		Shift + AV
	Mute		Options
	Fast Forward		Shift + Options
	Card		Media
	REC Stop		Rec
	3D-Y/C		Shift + 3
	1		1
	2		2
	3		3
	4		4
	5		5

**Originalfernbedienung    Ersatzfernbedienung**

	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Pre Ch
	DTV		TV/R
	[...]		Subt
	[≡?]		3D
	[≡i]		Shift + Info
	[≡]		Text
	Sound		Dual
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -





**Originalfernbedienung Ersatzfernbedienung**

	Input		AV
	DTV Menu		D. Menu
	Menu		Menu
	Guide		Guide
	List		List
	Up		Up
	Left		Left
	Right		Right
	OK		Ok
	Down		Down
	Exit		Exit
	Return		Back
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

**Originalfernbedienung Ersatzfernbedienung**


