
 





**Originalfernbedienung    Ersatzfernbedienung**

	On/Off		Power
	Freeview Play		Options
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tv Guide		Guide
	Picture		Format
	Sound		Dual
	Source		AV
	Vol+		Vol +

**Originalfernbedienung    Ersatzfernbedienung**

	Vol-		Vol -
	Mute		Mute
	CH+		Ch +
	CH-		Ch -
	Menu		Menu
	Exit		Exit
	Back		Back
	FAV		Pre Ch
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Info		Info
	Text		Text
	Subtitle		Subt
	TV		TV/R




**Originalfernbedienung    Ersatzfernbedienung**

	You Tube		Media
	Netflix		Smart
	APPS		Shift + Media
	Rec/DVD Menu		Rec
	I<<		I<<
	>>I		>>I
	Stop		Stop
	Rec List/DVD		D. Menu
	<<		<<
	>>		>>
	Play		Play
	Pause		Pause
	Red/Goto		Red
	Green/A-B		Green
	Yellow/Angle		Yellow
	Blue/Repeat		Blue

**Originalfernbedienung    Ersatzfernbedienung**