


Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--	 +  GUIDE	Shift + Guide
	Repeat		Text
	Vol +		Vol +
	Vol -		Vol -
	Pic. Mode		Options

Originalfernbedienung Ersatzfernbedienung

	S. Mode		Dual
	Source		AV
	CH +		Ch +
	CH -		Ch -
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	CH. Edit		Smart
	Menu		Menu
	Aspect		Format
	Sleep		Sleep
	Rec		Rec
	Rec Menu	 + 	Shift + Rec
	Red		Red
	Green		Green





Originalfernbedienung Ersatzfernbedienung

	Yellow		Yellow
	Blue		Blue
	CH. Group		3D
	TV / Radio		TV/R
	I/II Audio		Shift + Dual
	Subtitle		Subt
	EPG		Guide
	Info		Info
	Play/Pause / Size		Play
	Play/Pause / Size		Pause
	Stop / Reveal		Stop
	<< / Text (Page -)		<<
	>> / Index (Page +)		>>
	<< / Subpage (FAV -)		<<
	>> / Hold(Fav +)		>>

Originalfernbedienung Ersatzfernbedienung

