




 
 



 
 

 
 
 


 

 
 

 



 

 

 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Menu		Menu
	Q.Menu		D. Menu
	Exit		Exit
	Back		Back
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -






 

 

 


 
 
 
 
 

 

 
 
 

 



Originalfernbedienung Ersatzfernbedienung

	PR +		Ch +
	PR-		Ch -
	i		Info
	Guide/Tv+Book		Shift + Options
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Pre Ch
	TV		TV/R
	[≡]/Text		Text





Originalfernbedienung Ersatzfernbedienung

	* / o ..		Eject
	Source/Game		AV
	* / o		List
	World		Guide
	Music/Movie/Phot		Options
	[-O-]		Sleep
	[≡]..		Subt
	Lang		Dual
	Rec		Rec
	Stop		Stop
	Pause		Pause
	Play		Play
	>>		>>
	<<		<<

Originalfernbedienung Ersatzfernbedienung

