



Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	[<>]		Picture / Format
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	AV		AV / Input / RDS
	0		0
	Swap		Back / Return
	Swap		D.Menu / Top
	PC		Fav / Marker / PC

Originalfernbedienung Ersatzfernbedienung

	TV		TV/Radio /
	Menu		Menu / Home
	Text / Mix		Text / Goto
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Vol+		Vol+
	PR+		CH+ / Page+
	Vol-		Vol-
	PR-		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[ i ]		Info / Angle





Originalfernbedienung   Ersatzfernbedienung

[?]	[?]	LIST SMART	Smart / List
[+]	[+]	SIZE ZOOM	Zoom / Size
[◆]	[◆]	MEDIA DISPLAY	Display / Media
[≡x]	[≡x]	SURROUND	Eject / Surround
[:≡]	[:≡]	GUIDE EPG	Guide / EPG / --
[ ]	[ ]	EQ SUBTITLE	Subtitle / EQ
[♪]	[♪]	TITLE SOUND	Sound / Title

Originalfernbedienung   Ersatzfernbedienung


