



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open / Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Display		Info
	+10		Guide
	Vol-		Vol -
	Vol+		Vol +
	Mute		Mute

Originalfernbedienung Ersatzfernbedienung

	DVD Menu		D. Menu
	Setup		Menu
	I<<		I<<
	>>I		>>I
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	<<		<<
	>>		>>
	Play		Play
	Pause / Step		Pause
	Slow		Rec
	Stop		Stop
	Program		Sleep
	Subtitle		Subt





Originalfernbedienung Ersatzfernbedienung

	Cancel		Exit
	Search		TV/R
	PAL-MUL-NT		Format
	Angle		Smart
	Repeat		Text
	Audio		Dual
	Zoom		Shift + Eject
	A-B		Shift + Text

Originalfernbedienung Ersatzfernbedienung

