



Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------------|---|------------------------|
|  | Power |  | Power |
|  | Eject |  | Eject / Surround |
|  | Timer REC |  | Shift + Rec / Rec Mode |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | Channel |  | CH+ / Page+ |
|  | 0/AV |  | 0 |
|  | TV/VCR |  | TV/Radio / |
|  | Channel Tracking- |  | CH- / Page- |
|  | Speed/SP/LP |  | Zoom / Size |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------------|---|-----------------------|
|  | Call |  | Sound / Title |
|  | REC/OTR |  | Rec / Rec Mode |
|  | Play/Slow+ |  | Play / Slow |
|  | Pause/Still |  | Pause / Step / Freeze |
|  | <</< |  | << / Tune- |
|  | >>/> |  | >> / Tune+ |
|  | Program |  | D.Menu / Top |
|  | Stop/Slow- |  | Stop / Hold |
|  | Enter |  | OK |
|  | Menu |  | Menu / Home |
|  | Cancel |  | Exit / Cancel / Clear |
|  | Index |  | Smart / List |
|  | ATR |  | Display / Media |
|  | Clock/Counter |  | Sleep / Timer |
|  | Zero/Return |  | Back / Return |
|  | Counter/Reset |  | Picture / Format |
|  | Audio Select |  | Audio / Lang I/II |

