



 


 

 

 

 





 




 

 

 



 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Pre Ch
	Source		AV
	Menu		Menu
	P.Mode	 + 	Shift + Format
	S.Mode	 + 	Shift + Dual

Originalfernbedienung Ersatzfernbedienung

	Exit		Exit
	Display	 + 	Shift + Info
	Enter		Ok
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	FAV/List		Dual
	Freeze		Options
	Tv/Radio		TV/R
	Rec		Rec
	Red		Red
	Green		Green





Originalfernbedienung Ersatzfernbedienung

	Yellow		Yellow
	Cyan		Blue
	<</Guide		<<
	>>/Aspect		>>
	I<</Cancel		Shift + Subt
	>>/Sub.Pg		Back
	Stop/Index		Stop
	Play/Pause/Time Shift		Play
	Subtitle		Subt
	Text		Text
	Reveal		Shift + Options
	Size		Format
	Hold		Eject
	DTV/ATV		Info
	Rec List		D. Menu
	Sleep		Sleep
	MTS		Shift + Sleep

Originalfernbedienung Ersatzfernbedienung

