




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	>>		>> / Tune+
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7

Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	0		0
	Info		Info / Angle
	EPG		Guide / EPG / -/-
	≡		Menu / Home
	Source		AV / Input / RDS
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		OK
	Exit		Exit / Cancel / Clear
	Smart		Smart / List
	←		Back / Return
	Vol+		Vol+
	P+		CH+ / Page+





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Vol-		Vol-				
	Home		Shift + Menu /				
	P-		CH- / Page-				
	Netflix		Shift + Red / Netflix /				
	You Tube		Shift + Yellow / YouTube /				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				
	O)I/II		Audio / Lang I/II				
	[=]		Text / Goto				
	Subt.		Subtitle / EQ				

