



 

 



 

 
 
 







 

 













 

 















 













Originalfernbedienung Ersatzfernbedienung

	Eject		Eject / Surround
	Tv Power		Shift + Power
	Power		Power
	Stereo/mono		Shift + Sound / Title
	Name		AV / Input / RDS
	Dimmer		Shift + Mute / Dimmer
	Repeat		Green / APP / Repeat
	Tv/Video		TV/Radio /
	Clear		Exit / Cancel / Clear
	Memory		Shift + D.Menu / Top Menu
	Time		Sleep / Timer
	Muting		Mute / Dimmer
	Play Mode		Play / Slow
	1		1
	1 TV		Shift + 1
	2		2
	2 TV		Shift + 2



 
 

 
 
 



Originalfernbedienung Ersatzfernbedienung

	3		3
	3 TV		Shift + 3
	Function		Shift + Setup / OPT / Tools
	Audio		Audio / Lang I/II
	4		4
	4 TV		Shift + 4
	5		5
	5 TV		Shift + 5
	6		6
	6 TV		Shift + 6
	Band		Picture / Format
	Angle		Info / Angle
	7		7
	7 TV		Shift + 7
	8		8
	8 TV		Shift + 8
	9		9

 

 





 

 

 



 
 
 
 
 

 
 
 
 
 








Originalfernbedienung Ersatzfernbedienung

	9 TV		Shift + 9
	Sound Field		Sound / Title
	Subtitle		Subtitle / EQ
	>10		Guide / EPG / -/--
	>10 TV		Fav / Marker / PC
	0/10		0
	0/10 TV		Shift + 0
	Enter		Shift + OK
	Display		Display / Media
	Vol+		Vol+
	Vol+ Tv		Shift + Vol+
	Vol-		Vol-
	Vol- Tv		Shift + Vol-
	I<<		I<< / Preset-
	I<< TV		Shift + I<< / Preset-
	>>I		>>I / Preset+
	>>I TV		Shift + >>I / Preset+

Originalfernbedienung Ersatzfernbedienung

	<<		<< / Tune-
	>>		>> / Tune+
	Play/Select		Shift + Play /
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	DVD Display		Shift + Display / Media
	DVD Top Menu		Menu / Home
	Up		Up
	DVD Menu		D.Menu / Top
	Return		Back / Return
	Left		Left
	OK		OK
	Enter TV		Shift + Down
	Right		Right
	DVD Setup		Setup / OPT /
	AMP Menu		Shift + Menu /
	Down		Down

