

 
 
 

 
 
 

 
 

 

 
 

 
 
 
 

 



 

 



 
 
 




**Originalfernbedienung    Ersatzfernbedienung**

	M.Scan		Smart
	Fader		Mute
	Continue		Subt
	Shuffle		Format
	Program		Sleep
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	10		0
	>10		Guide
	A.Space		TV/R

**Originalfernbedienung    Ersatzfernbedienung**

	Time		AV
	A-B		3D
	Repeat		Text
	Play		Play
	Pause		Pause
	Stop		Stop
	I<< AMS		I<<
	AMS >>I		>>I
	<<		<<
	>>		>>
	Line Out Level+		Ch +
	Line Out Level-		Ch -

