
 

 
 


 

 



 

 


 
 



 
 
 
 




Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------|---|-------|
|  | Power |  | Power |
|  | Mute |  | Mute |
|  | [i+]/[?] |  | Info |
|  | A/B/[+] |  | TV/R |
|  | Input/[+] |  | AV |
|  | [] |  | Smart |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | -/-- |  | Guide |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------|---|-------|
|  | Recall |  | Back |
|  | Timer/[≡i] |  | List |
|  | Timer/[X] |  | Sleep |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | Prog+ |  | Ch + |
|  | Prog- |  | Ch - |
|  | (↔) |  | Dual |
|  | Menu |  | Menu |
|  | Up |  | Up |
|  | Left |  | Left |
|  | OK |  | Ok |
|  | Right |  | Right |
|  | Down |  | Down |
|  | [≡] |  | Text |
|  | Red/Sound |  | Red |
|  | Green/* |  | Green |



