








 
 
 





Originalfernbedienung	Ersatzfernbedienung
 Off	 Power
 Mode	 Format
 Radio/Band	 TV/R
 Audio In	 AV
 I<</Tune-	 I<<
 Play	 Play
 Pause	 Pause
 >>I/Tune+	 >>I
 Preset+	 Ch +
 Preset-	 Ch -
 Up	 Up
 Down	 Down
 Vol+	 Vol +
 Vol-	 Vol -
 Menu	 Menu
 Enter	 Ok
 Mega Bass	 Smart

Originalfernbedienung	Ersatzfernbedienung
 Mega Xpand	 Media
 Snooze	 Mute

