






 






























 





 



 




 

 















Originalfernbedienung Ersatzfernbedienung

	TV		Shift + 1
	TV		TV/Radio /
	Theatre Sync		Text / Goto
	Power		Power
	TV / Video		AV / Input / RDS
	Sleep		Sleep / Timer
	SA-CD / CD		Shift + 3
	Display		Display / Media
	Sound Field		Sound / Title
	Dynamic Bass		Eject / Surround
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7

Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	Clear		Exit / Cancel / Clear
	0		0
	Picture Navi		Picture / Format
	Audio		Audio / Lang I/II
	Subtitle /		Subtitle / EQ
	Angle		Info / Angle
	Top Menu		Shift + D.Menu / Top Menu
	Up		Up
	Menu		Menu / Home
	Left		Left
	Enter		OK
	Right		Right
	Return		Back / Return
	Down		Down
	AMP Menu		D.Menu / Top





Originalfernbedienung Ersatzfernbedienung

	Display		Smart / List
	Presets -		Preset -
	Replay		Shift + Left
	Advance		Shift + Right
	Presets +		Preset +
	Slow / Tuning -		Tune -
	Play / Slow		Play / Slow
	Slow / Tuning +		Tune +
	Pause / Step / Freeze		Pause / Step / Freeze
	Stop / Hold		Stop / Hold
	Volume +		Vol+
	Function+		CH+ / Page+
	Muting		Mute / Dimmer
	Volume -		Vol-
	Function -		CH- / Page-

Originalfernbedienung Ersatzfernbedienung


 





Originalfernbedienung Ersatzfernbedienung

	TV		Shift + 1
	TV		TV/Radio /
	Power		Power
	TV / Video		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Guide / EPG / -/--
	0		0
	Up		Up
	Menu		Menu / Home

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	Enter		OK
	Right		Right
	Return		Back / Return
	Down		Down
	Vol+		Vol+
	CH+		CH+ / Page+
	Vol-		Vol-
	CH-		CH- / Page-

