






 


















Originalfernbedienung	Ersatzfernbedienung
 Mute	 Mute / Dimmer
 Power	 Power
 [ ]/[+]	 TV/Radio /
 Input	 AV / Input / RDS
 [=]	 Text / Goto
 [X]/[o]	 Zoom / Size
 1	 1
 2	 2
 3	 3
 [◆]	 Picture / Format
 4	 4
 5	 5
 6	 6
 [?]/[i+]	 Subtitle / EQ
 7	 7
 8	 8
 9	 9

Originalfernbedienung	Ersatzfernbedienung
 ↔	 Smart / List
 -/--	 Guide / EPG / -/--
 0	 0
 C	 Fav / Marker / PC
 [  ]/[=]	 Display / Media
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Menu	 Menu / Home
 +	 Up
 +	 Vol+
 +	 CH+ / Page+
 →←	 OK
 -	 Down
 -	 Vol-
 -	 CH- / Page-











