 




 
 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	[]		Display / Media
	[=]		Text / Goto
	Tv/Magn		TV/Radio /
	Menu		Menu / Home
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8

Originalfernbedienung Ersatzfernbedienung

	9		9
	-/--		Guide / EPG / -/--
	0		0
	Vol+		Vol+
	Chaine+		CH+ / Page+
	Vol-		Vol-
	Chaine-		CH- / Page-











 

 

 

 

 

 

 

 

 

 

 

 





Originalfernbedienung Ersatzfernbedienung

	Eject		Eject / Surround
	Power		Power
	[]		Info / Angle
	Choix Entree		AV / Input / RDS
	SP/LP		Text / Goto
	Showview		Display / Media
	Tv/Magn		TV/Radio /
	ENR		Rec / Rec Mode
	I<< Recher Index		I<< / Preset-
	Recher Index >>>		>>> / Preset+
	Remise a Zero		Smart / List
	Up		Up
	Pause		Pause / Step / Freeze
	<<<		<<< / Tune-
	Left		Left
	Play		Play / Slow
	OK		OK

Originalfernbedienung Ersatzfernbedienung

	Right		Right
	>>>		>>> / Tune+
	Down		Down
	Stop		Stop / Hold
	Menu		Menu / Home
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/-		Guide / EPG / -/-
	0		0
	Volume+		Vol+





Originalfernbedienung

Ersatzfernbedienung

	Chaine+		CH+ / Page+
	Volume-		Vol-
	Chaine-		CH- / Page-

Originalfernbedienung

Ersatzfernbedienung

