





Originalfernbedienung Ersatzfernbedienung

	Open/Close		Eject / Surround
	Power		Power
	1		1
	2		2
	3		3
	Mute		Mute / Dimmer
	4		4
	5		5
	6		6
	Title/TTX		Text / Goto
	7		7
	8		8
	9		9
	Menu		Menu / Home
	10+		Fav / Marker / PC
	0		0
	Display		Display / Media

Originalfernbedienung Ersatzfernbedienung

	Prog/EPG		Guide / EPG / -/--
	PBC		D.Menu / Top
	Goto		Shift + Text /
	Vol-		Vol-
	Vol+		Vol+
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Stop		Stop / Hold
	Setup		Setup / OPT /
	Up		Up
	Return		Back / Return
	Left/Fav-		Left
	Enter		OK
	Right/Fav+		Right
	Mode		Red / Netflix / Search
	Down		Down
	Tv/Radio		TV/Radio /



