



 

 
 
 



 


 

 














Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject / Surround
	1		1
	2		2
	3		3
	Subtitle		Subtitle / EQ
	4		4
	5		5
	6		6
	Angle/Del		Info / Angle
	7		7
	8		8
	9		9
	Language		Audio / Lang I/II
	0/10		0
	+10		Fav / Marker / PC
	Video		Shift + 4













 



 






 








Originalfernbedienung Ersatzfernbedienung

	Return		Back / Return
	Mute		Mute / Dimmer
	N/P		Red / Netflix / Search
	Time		Sleep / Timer
	OSD		Display / Media
	Setup		Setup / OPT /
	Up		Up
	Title/TTX		Text / Goto
	Left/FAV-		Left
	Enter		OK
	Right/FAV+		Right
	Menu/PBC		Menu / Home
	Down		Down
	Prog/EPG		Guide / EPG / -/-
	Play		Play / Slow
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze





Originalfernbedienung Ersatzfernbedienung

	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	A-B	 <small>REPEAT A-B</small>	Yellow / YouTube / Repeat
	Repeat	 <small>REPEAT</small>	Green / APP / Repeat
	L/R		Sound / Title
	Slow		Shift + Play /
	Zoom		Zoom / Size
	Clear		Exit / Cancel / Clear
	Step		Shift + Pause / Step /
	Rec		Rec / Rec Mode
	Tv/Radio		TV/Radio /
	Source		AV / Input / RDS
	Vol-		Vol-
	Vol+		Vol+

Originalfernbedienung Ersatzfernbedienung

