 



 









 




 











 




 

 


 
 
 

 

 
 


 








Originalfernbedienung Ersatzfernbedienung




	Power		Power
	Setup		Setup / OPT /
	DTV		D.Menu / Top
	1		1
	2		2
	3		3
	HDMI/AV		AV / Input / RDS
	4		4
	5		5
	6		6
	Disc		Shift + 3
	7		7
	8		8
	9		9
	Rec		Rec / Rec Mode
	EPG		Guide / EPG / -/--
	TTX		Text / Goto

Originalfernbedienung Ersatzfernbedienung

	0		0
	Movie		Display / Media
	Music		Smart / List
	Photo		Picture / Format
	Vol-		Vol-
	Vol+		Vol+
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Home		Menu / Home
	Edit		Back / Return
	Copy		Shift + Smart / List
	Repeat		Green / APP / Repeat
	<<		<< / Tune-





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Play/Pause		Play / Slow				
	I<<		I<< / Preset-				
	>>		>> / Tune+				
	Stop		Stop / Hold				
	>>I		>>I / Preset+				
	Audio		Audio / Lang I/II				
	Sub-T		Subtitle / EQ				
	FAV		Fav / Marker / PC				
	Info		Info / Angle				
	Mute		Mute / Dimmer				
	DVD		Shift + 2				
	Timer		Sleep / Timer				
	T/R		Zoom / Size				

