



Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Eject		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/-- +10	 + 	Shift + Guide
	Recall		Back
	V+		Vol +
	V-		Vol -
	Title / Lang		Dual

Originalfernbedienung Ersatzfernbedienung

	EPG / D.Disp		Guide
	P+		Ch +
	P-		Ch -
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	LCD Menu		Menu
	Picture Format / DVD Setup		Format
	Picture Format / DVD Setup		Options
	Source		AV
	PMode	 + 	Shift + Format
	SMode	 + 	Shift + Dual
	Mute		Mute
	Play / Pause		Play
	Play / Pause		Pause



