


 



 

 

 

 



 

 

 



 

 

 

 

 





Originalfernbedienung	Ersatzfernbedienung
 Standby	 Power
 Mute	 Mute / Dimmer
 Search	 Red / Netflix / Search
 CD/USB	 Eject / Surround
 Source	 AV / Input / RDS
 Repeat	 Green / APP / Repeat
 Intro	 Shift + OK
 Random	 Blue / Prime Video / Random
 Stop	 Stop / Hold
 CH+	 CH+ / Page+
 >>I	 >>I / Preset+
 CH-	 CH- / Page-
 I<<	 I<< / Preset-
 <</FF-	 << / Tune-
 >>/FF+	 >> / Tune+
 Play/Pause	 Play / Slow
 DSP	 D.Menu / Top

Originalfernbedienung	Ersatzfernbedienung
 Loudness	 Sound / Title
 Memory	 Picture / Format
 Function	 OK
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10	 Guide / EPG / -/-
 Prog	 TV/Radio /
 Vol-	 Vol-
 Vol+	 Vol+



Menu