



Originalfernbedienung Ersatzfernbedienung

|   |              |   |                             |
|---|--------------|---|-----------------------------|
|    | Power        |    | Power                       |
|    | Open / Close |    | Eject / Surround            |
|    | OSD          |    | Display / Media             |
|    | 1            |    | 1                           |
|    | 2            |    | 2                           |
|    | 3            |    | 3                           |
|    | Subtitle     |    | Subtitle / EQ               |
|    | 4            |    | 4                           |
|    | 5            |    | 5                           |
|    | 6            |    | 6                           |
|  | Angle        |  | Info / Angle                |
|  | 7            |  | 7                           |
|  | 8            |  | 8                           |
|  | 9            |  | 9                           |
|  | Language     |  | Audio / Lang I/II           |
|  | R/L          |  | Blue / Prime Video / Random |
|  | 0            |  | 0                           |











Originalfernbedienung Ersatzfernbedienung

|   |              |   |                       |
|---|--------------|---|-----------------------|
|    | 10+          |    | Guide / EPG / -/--    |
|    | Setup        |    | Setup / OPT /         |
|    | Mute         |    | Mute / Dimmer         |
|    | Clear        |    | Exit / Cancel / Clear |
|    | Prog         |    | TV/Radio /            |
|    | Time         |    | Sleep / Timer         |
|    | Up           |    | Up                    |
|    | Left         |    | Left                  |
|    | Enter        |    | OK                    |
|    | Right        |    | Right                 |
|  | Down         |  | Down                  |
|  | Title        |  | Sound / Title         |
|  | Menu         |  | Menu / Home           |
|  | Default      |  | AV / Input / RDS      |
|  | <<           |  | << / Tune-            |
|  | Play / Pause |  | Play / Slow           |
|  | Play / Pause |  | Pause / Step / Freeze |





Originalfernbedienung Ersatzfernbedienung

|   |        |   |                           |
|---|--------|---|---------------------------|
|    | I<<    |    | I<< / Preset-             |
|    | >>     |    | >> / Tune+                |
|    | Stop   |    | Stop / Hold               |
|    | >>I    |    | >>I / Preset+             |
|    | N/F    |    | Red / Netflix / Search    |
|    | Repeat |    | Green / APP / Repeat      |
|    | A-B    |    | Yellow / YouTube / Repeat |
|    | zoom   |    | Zoom / Size               |
|    | Mode   |    | D.Menu / Top              |
|   | Step   |  +    | Shift + Pause / Step /    |
|  | Slow   |  +  | Shift + Play /            |
|  | Vol+   |    | Vol+                      |
|  | Resume |    | Smart / List              |
|  | PBC    |    | Picture / Format          |
|  | Return |    | Back / Return             |
|  | Vol-   |    | Vol-                      |











 



 

 
Originalfernbedienung Ersatzfernbedienung


















|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |







| Originalfernbedienung | Ersatzfernbedienung   |                       |
|-----------------------|---|-----------------------|
| On/Off                |    | Power                 |
| Audio Off             |    | Mute / Dimmer         |
| Play                  |    | Play / Slow           |
| Pause                 |    | Pause / Step / Freeze |
| Stop                  |    | Stop / Hold           |
| Record                |    | Rec / Rec Mode        |
| Rewind                |    | << / Tune-            |
| F.Forward             |    | >> / Tune+            |
| Prev.                 |    | I<< / Preset-         |
| Next                  |    | >>I / Preset+         |
| Title                 |   | Sound / Title         |
| Audio                 |  | Audio / Lang I/II     |
| Subt.                 |  | Subtitle / EQ         |
| Open/Close            |  | Eject / Surround      |
| Auto/Track            |  | Picture / Format      |
| Zoom                  |  | Zoom / Size           |
| Np                    |  | Sleep / Timer         |

| Originalfernbedienung | Ersatzfernbedienung   |                       |
|-----------------------|---|-----------------------|
| Progr.                |    | TV/Radio /            |
| Top Menu              |    | D.Menu / Top          |
| Setup                 |    | Setup / OPT /         |
| C/CH                  |    | Text / Goto           |
| DVD/TV                |    | AV / Input / RDS      |
| Menu                  |    | Menu / Home           |
| Menu Up               |    | Up                    |
| Angle                 |    | Info / Angle          |
| Menu Left             |    | Left                  |
| OK Enter              |    | OK                    |
| Menu Right            |   | Right                 |
| Pbc                   |  | Exit / Cancel / Clear |
| Menu Down             |  | Down                  |
| Return                |  | Back / Return         |
| Volume+               |  | Vol+                  |
| Resume                |  | Smart / List          |
| Slow Up               |  | CH+ / Page+           |



























 
 







Originalfernbedienung   Ersatzfernbedienung










 






 
|            |   |                       |
|------------|---|-----------------------|
| On/Off     |    | Power                 |
| Audio Off  |    | Mute / Dimmer         |
| Play       |    | Play / Slow           |
| Pause      |    | Pause / Step / Freeze |
| Stop       |    | Stop / Hold           |
| Record     |    | Rec / Rec Mode        |
| Rewind     |    | << / Tune-            |
| F.Forward  |    | >> / Tune+            |
| Prev.      |    | I<< / Preset-         |
| Next       |    | >>I / Preset+         |
| Title      |  | Sound / Title         |
| Lang       |  | Audio / Lang I/II     |
| Subt.      |  | Subtitle / EQ         |
| Open/Close |  | Eject / Surround      |
| Auto/Track |  | Picture / Format      |
| Zoom       |  | Zoom / Size           |
| Pbc        |  | Sleep / Timer         |

Originalfernbedienung   Ersatzfernbedienung

|             |   |                       |
|-------------|---|-----------------------|
| Progr.      |    | TV/Radio /            |
| Top Menu    |    | D.Menu / Top          |
| Setup       |    | Setup / OPT /         |
| Resume      |    | Text / Goto           |
| DVD/TV      |    | AV / Input / RDS      |
| Menu        |    | Menu / Home           |
| Menu Up     |    | Up                    |
| Angle       |    | Info / Angle          |
| Menu Left   |    | Left                  |
| OK Enter    |    | OK                    |
| Menu Right  |  | Right                 |
| Clear/00:00 |  | Exit / Cancel / Clear |
| Menu Down   |  | Down                  |
| Return      |  | Back / Return         |
| Volume+     |  | Vol+                  |
| Mode        |  | Smart / List          |
| Slow Up     |  | CH+ / Page+           |





| Originalfernbedienung |   | Ersatzfernbedienung    |  |
|-----------------------|---|------------------------|--|
| Volume-               |    | Vol-                   |  |
| Display               |    | Display / Media        |  |
| Slow Down             |    | CH- / Page-            |  |
| 1                     |    | 1                      |  |
| 2                     |    | 2                      |  |
| 3                     |    | 3                      |  |
| 4                     |    | 4                      |  |
| 5                     |    | 5                      |  |
| 6                     |    | 6                      |  |
| 7                     |    | 7                      |  |
| 8                     |    | 8                      |  |
| 9                     |   | 9                      |  |
| +10                   |  | Guide / EPG / -/--     |  |
| 0                     |  | 0                      |  |
| C/CH                  |  | Fav / Marker / PC      |  |
| Np                    |  | Red / Netflix / Search |  |
| Repeat/1/All          |  | Green / APP / Repeat   |  |

[illegible]