

 


 




Originalfernbedienung Ersatzfernbedienung

|   |            |   |              |
|---|------------|---|--------------|
|    | Power      |    | Power        |
|    | Open/Close |    | Eject        |
|    | 1          |    | 1            |
|    | 2          |    | 2            |
|    | 3          |    | 3            |
|    | 4          |    | 4            |
|    | 5          |    | 5            |
|    | 6          |    | 6            |
|    | 7          |    | 7            |
|    | 8          |    | 8            |
|    | 9          |    | 9            |
|  | 0          |    | 0            |
|  | Top Menu   |  +  | Shift + Menu |
|  | Menu       |    | Menu         |
|  | Setup      |    | Options      |
|  | Display    |    | Info         |
|  | Up/CH+     |    | Ch +         |

Originalfernbedienung Ersatzfernbedienung

|   |            |   |       |
|---|------------|---|-------|
|    | Down/CH-   |    | Ch -  |
|    | I<</Prev   |    | I<<   |
|    | <</FR      |    | <<    |
|    | >>/FF      |    | >>    |
|    | >>/Next    |    | >>I   |
|    | Stop       |    | Stop  |
|    | Play       |    | Play  |
|    | Pause/Step |    | Pause |
|    | Up         |    | Up    |
|    | Down       |    | Down  |
|    | Right      |    | Right |
|  | Left       |  | Left  |
|  | Enter      |  | Ok    |
|  | Guider     |  | Guide |
|  | Source     |  | AV    |
|  | Tv(Mode)   |  | TV/R  |
|  | Contents   |  | 3D    |





Originalfernbedienung Ersatzfernbedienung

|  |           |   |            |
|--|-----------|---|------------|
|  | Navi      |   | List       |
|  | Edit      |   | Dual       |
|  | Copy      |   | Subt       |
|  | TimeShift |   | Text       |
|  | Record    |   | Rec        |
|  | HDD/DVD   |   | Smart      |
|  | ShowView  |   | Format     |
|  | Timer     | + | Shift + AV |
|  |           |   |            |
|  |           |   |            |
|  |           |   |            |
|  |           |   |            |
|  |           |   |            |
|  |           |   |            |
|  |           |   |            |
|  |           |   |            |
|  |           |   |            |
|  |           |   |            |
|  |           |   |            |
|  |           |   |            |

Originalfernbedienung Ersatzfernbedienung

|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |

