














































 












 



 






Originalfernbedienung Ersatzfernbedienung

	Off/On		Power
	Sleep		Sleep / Timer
	CD Easy Play		Yellow / YouTube / Repeat
	Tape Easy Play		Red / Netflix / Search
	Tuner Easy Play		Green / APP / Repeat
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Program CD		Setup / OPT /
	Cancel CD		Exit / Cancel / Clear

Originalfernbedienung Ersatzfernbedienung

	CD		Shift + 3
	Tuner/Band		Shift + 6
>10 button" data-bbox="507 235 540 268"/>	>10		Guide / EPG / -/-
	Play CD		Play / Slow
	Pause CD		Pause / Step / Freeze
	Stop CD		Stop / Hold
	I<< CD		I<< / Preset-
	>>I CD		>>I / Preset+
	Rec Pause Tape		Rec / Rec Mode
	Deck 1/2 Tape		Shift + 5
	On/Flat EQ.Space		Audio / Lang I/II
	Mode EQ.Space		Subtitle / EQ
	V.Bass		Sound / Title
	< Tape		Left
	Stop Tape		OK
	> Tape		Right
	<< Tape		<< / Tune-





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	>> Tape		>> / Tune+
	Muting -20dB		Mute / Dimmer
	Volume-		Vol-
	Volume+		Vol+

