























 





 

























Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	Sleep		Sleep / Timer
	AV		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Rec		Rec / Rec Mode
	0		0
	Stop		Stop / Hold
	<<		<< / Tune-




 







 






 
Originalfernbedienung Ersatzfernbedienung

	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	EPG		Guide / EPG / -/-
	Up		Up
	Recall		Fav / Marker / PC
	I<<		I<< / Preset-
	Left		Left
	OK		OK
	Right		Right
	>>I		>>I / Preset+
	Zurück		Back / Return
	Down		Down
	Info		Info / Angle
	P+		CH+ / Page+
	Exit		Exit / Cancel / Clear
	Vol+		Vol+





Originalfernbedienung Ersatzfernbedienung

	P-		CH- / Page-
	Multimedia		Display / Media
	Vol-		Vol-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Menü		Menu / Home
	Untertitel		Subtitle / EQ
	Lang.		Audio / Lang I/II
	Ton		TV/Radio /
	Zoom		Zoom / Size
	TXT		Text / Goto
	Internet		Smart / List
	FAV		Shift + Fav / Marker / PC
	Bildmodus		Picture / Format

Originalfernbedienung Ersatzfernbedienung

