













































 











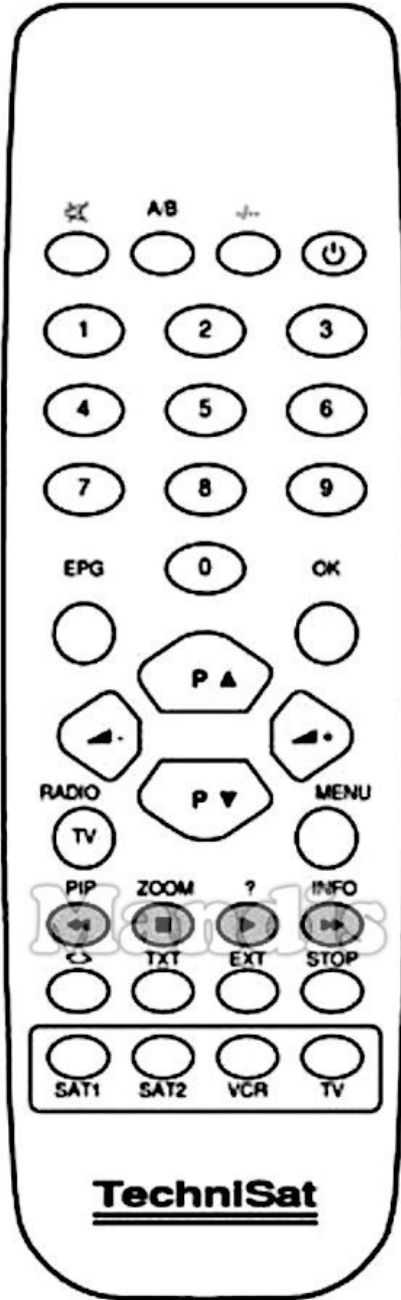 

Originalfernbedienung Ersatzfernbedienung

	Mute		Mute / Dimmer
	A/B		Shift + Yellow / YouTube /
	A/B		Display / Media
	-/--		Shift + Guide / EPG / -/--
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	EPG		Guide / EPG / -/--
	0		0
	OK		OK







 



Originalfernbedienung Ersatzfernbedienung

	Up / P+		CH+ / Page+
	Up / P+		Up
	Left / Vol-		Left
	Left / Vol-		Vol-
	Right / Vol+		Right
	Right / Vol+		Vol+
	TV / Radio		TV/Radio /
	Down / P-		CH- / Page-
	Down / P-		Down
	Menu		Menu / Home
	Red / PIP		Red / Netflix / Search
	Green / Zoom		Green / APP / Repeat
	Green / Zoom		Zoom / Size
	Yellow / ?		Yellow / YouTube / Repeat
	Blue / Info		Info / Angle
	Blue / Info		Blue / Prime Video / Random
	Recall		Back / Return





Originalfernbedienung Ersatzfernbedienung

	TXT		Text / Goto
	EXT		AV / Input / RDS
	Stop		Stop / Hold
	TV		Smart / List
	TV		Shift + 1

Originalfernbedienung Ersatzfernbedienung

