





































Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide / EPG / -/--
	AV		AV / Input / RDS
	Menu		Menu / Home
	Swap		Back / Return
	OK		OK











 





Originalfernbedienung Ersatzfernbedienung

	Up		Up
	PR+		CH+ / Page+
	PR-		CH- / Page-
	Down		Down
	Right		Right
	Vol+		Vol+
	Left		Left
	Vol-		Vol-
	TV/TX		Text / Goto
	PP		Fav / Marker / PC
	16:9		Setup / OPT /
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Violet		Display / Media
	[ ] Smart Controls		Picture / Format





**Originalfernbedienung**   **Ersatzfernbedienung**

	♪ Smart Controls		Sound / Title
	MIX/))·((		Audio / Lang I/II
	P100/PAT		Sleep / Timer
	SUB		Subtitle / EQ
	Update		Zoom / Size
	Hold		Stop / Hold
	Doub/Freeze		Eject / Surround
	REV/Scan		TV/Radio /

**Originalfernbedienung**   **Ersatzfernbedienung**