



 




 



 


 

 
 
 
 




 
 


Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
PWR On/Off		2abc	 2
Mute		3def	 3
Sleep Timer		4ghi	 4
TV		5jkl	 5
TV/SAT		6mno	 6
Menu		7pqrm	 7
Menu Up		8tuv	 8
Menu Left		9wxyz	 9
OK Enter		Guide Pilote	 Guide
Menu Right		0/10	 0
Exit		FAV Pref.	 Pre Ch
Menu Down			
Volume+			
CH/Page+			
Volume-			
CH/Page-			
1. ?	 1		

