

 



 

 
 


 


 




 


 

 

 



 





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|---------|---|--------|
|  | Power |  | Power |
|  | Mute |  | Mute |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | -/-- |  | Guide |
|  | i |  | Info |
|  | OO |  | Dual |
|  | □ |  | Format |
|  | ⊖ Sleep |  | 3D |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------|---|---------|
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | P+ |  | Ch + |
|  | P- |  | Ch - |
|  | (X) |  | Exit |
|  | >>I |  | >>I |
|  | OK |  | Ok |
|  | SEL |  | Menu |
|  | Fine Tuing+ |  | Right |
|  | Fine Tuing- |  | Left |
|  | TV/AV |  | AV |
|  | STD / [≡X] |  | Smart |
|  | M |  | Media |
|  | Text |  | Text |
|  | [/≡] |  | D. Menu |
|  | Reveal |  | TV/R |
|  | [1<≡] |  | << |



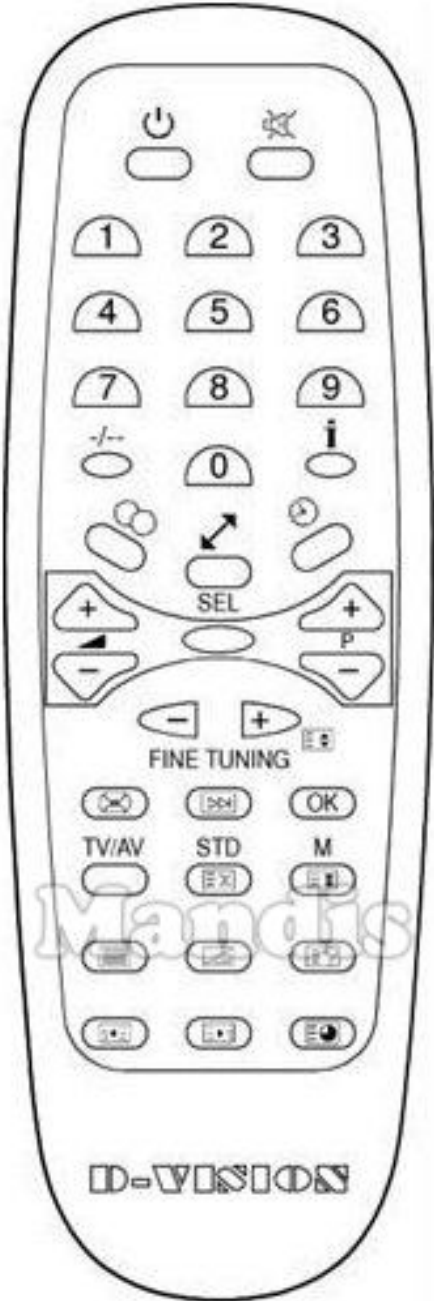

| Originalfernbedienung | Ersatzfernbedienung | Originalfernbedienung | Ersatzfernbedienung |
|-----------------------|---------------------|-----------------------|---------------------|
| | [=>1] | | >> |
| | [≡0] | | Options |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

