


 


 
 












 

 









 


 
 




 

 

 



 
 

 

 
 

 





 

 




 
Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|---|---------|
|  | Power |  | Power |
|  | Red/Sound |  | Red |
|  | Green/Picture |  | Green |
|  | Yellow/Feature |  | Yellow |
|  | Blue/Install |  | Blue |
|  | [≡] |  | Text |
|  | [≡O] |  | Options |
|  | [≡+] |  | Format |
|  | [≡X] |  | Smart |
|  | [.≡]/[■] |  | Subt |
|  | [≡◆]/[■] |  | Media |
|  | [≡?]/↓ |  | 3D |
|  | [≡i]/↑ |  | List |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------|---|--------|
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | P<P |  | Pre Ch |
|  | -/-- |  | Guide |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | Mute |  | Mute |
|  | P+ |  | Ch + |
|  | P- |  | Ch - |
|  | I-II |  | Dual |
|  | [i] |  | Info |
|  | TV |  | TV/R |
|  | AV |  | AV |



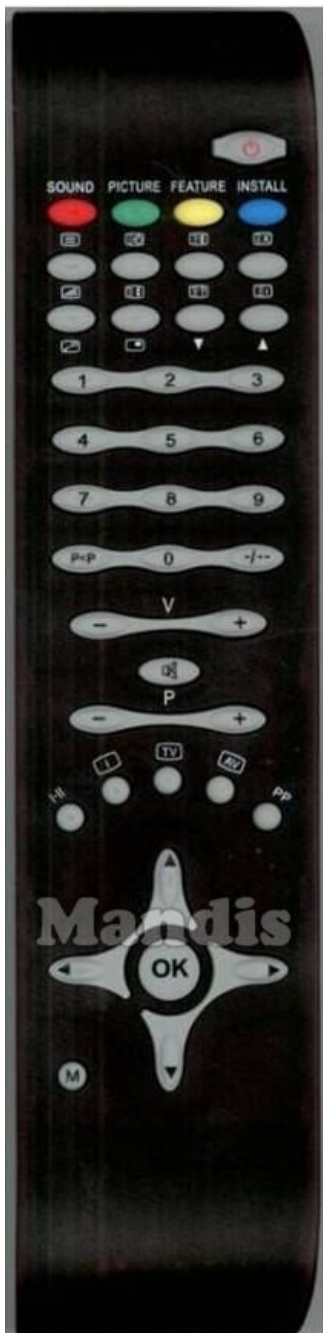

| Originalfernbedienung | Ersatzfernbedienung | Originalfernbedienung | Ersatzfernbedienung |
|-----------------------|---------------------|-----------------------|---------------------|
| | PP | | Back |
| | Up | | Up |
| | Down | | Down |
| | Right | | Right |
| | Left | | Left |
| | OK | | Ok |
| | M | | Menu |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

