



 


 
 
 



 

 
 
 



 
 
 

 
 

 






**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	HDMI Control		D. Menu
	Record		Rec
	Play		Play
	Pause		Pause
	Stop		Stop
	I<<		I<<
	<<		<<
	>>		>>
	>>I		>>I
	Screen		Format
	Lang		Dual
	Subtitle		Subt
	Internet		Media
	Red/Zoom/↑		Red
	Green/Repeat/↓		Green
	Yellow / Root		Yellow

**Originalfernbedienung Ersatzfernbedienung**

	Blue / Title		Blue
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Text		Text
	Swap		Pre Ch
	Up		Up
	Down		Down
	Right		Right
	Left		Left





Originalfernbedienung Ersatzfernbedienung Originalfernbedienung Ersatzfernbedienung

	Ok		Ok
	P/Ch+		Ch +
	P/Ch-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Menu		Menu
	Source		AV
	Return		Back
	Epg		Guide
	Info		Info
	Sleep		Sleep
	3D		3D
	Search Mode		TV/R
	Music/Movie/Phot		Smart
	Display		Shift + Info
	Presets		Options