 


 
 

 




Originalfernbedienung Ersatzfernbedienung

|   |        |   |        |
|---|--------|---|--------|
|    | Power  |    | Power  |
|    | Mute   |    | Mute   |
|    | Fav    |    | Pre Ch |
|    | List   |    | List   |
|    | Audio  |    | Dual   |
|    | Back   |    | Back   |
|    | Red    |    | Red    |
|    | Green  |    | Green  |
|    | Yellow |    | Yellow |
|    | Blue   |    | Blue   |
|   | i      |   | Info   |
|  | EPG    |  | Guide  |
|  | Up     |  | Up     |
|  | Left   |  | Left   |
|  | OK     |  | Ok     |
|  | Right  |  | Right  |
|  | Down   |  | Down   |


 





 


 




 
 
 
 



 
 


 
 
 
 
Originalfernbedienung Ersatzfernbedienung

|   |      |   |              |
|---|------|---|--------------|
|    | Menu |    | Menu         |
|    | Exit |    | Exit         |
|    | V +  |    | Vol +        |
|    | V -  |    | Vol -        |
|    | CH + |    | Ch +         |
|    | CH - |    | Ch -         |
|    | P +  |    | Shift + Ch + |
|    | P -  |    | Shift + Ch - |
|    | 1    |    | 1            |
|    | 2    |    | 2            |
|   | 3    |   | 3            |
|  | 4    |  | 4            |
|  | 5    |  | 5            |
|  | 6    |  | 6            |
|  | 7    |  | 7            |
|  | 8    |  | 8            |
|  | 9    |  | 9            |





Originalfernbedienung    Ersatzfernbedienung

|   |         |   |         |
|---|---------|---|---------|
|    | 0       |    | 0       |
|    | TV / R  |    | TV/R    |
|    | Home    |    | Smart   |
|    | Pause   |    | Pause   |
|    | Stop    |    | Stop    |
|    | <<      |    | <<      |
|    | >>      |    | >>      |
|    | Rec     |    | Rec     |
|    | Play    |    | Play    |
|    | I<<     |    | I<<     |
|   | >>I     |   | >>I     |
|  | OPT     |  | Options |
|  | Text    |  | Text    |
|  | SUB     |  | Subt    |
|  | Message |  | 3D      |
|   |         |   |         |
|   |         |   |         |

Originalfernbedienung    Ersatzfernbedienung

|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |

