 



 

 

 

 

 



 
 
 
 
 
 
 

 





 





 
 
 

 

 

 

 
 

 



 
 
 
 
 

 


 



 





Originalfernbedienung Ersatzfernbedienung

|   |           |   |       |
|---|-----------|---|-------|
|    | Power TV  |    | Power |
|    | 1 TV      |    | 1     |
|    | 2 TV      |    | 2     |
|    | 3 TV      |    | 3     |
|    | 4 TV      |    | 4     |
|    | 5 TV      |    | 5     |
|    | 6 TV      |    | 6     |
|    | 7 TV      |    | 7     |
|    | 8 TV      |    | 8     |
|    | 9 TV      |    | 9     |
|    | 0/-- TV   |    | 0     |
|  | AV TV     |  | AV    |
|  | Vol+      |  | Vol + |
|  | Vol-      |  | Vol - |
|  | Mute      |  | Mute  |
|  | Return TV |  | Back  |
|  | PR+ TV    |  | Ch +  |

Originalfernbedienung Ersatzfernbedienung

|   |                |   |        |
|---|----------------|---|--------|
|    | PR- TV         |    | Ch -   |
|    | Play TV        |    | Play   |
|    | << TV          |    | <<     |
|    | >> TV          |    | >>     |
|    | Record TV      |    | Rec    |
|    | Stop TV        |    | Stop   |
|    | Pause TV       |    | Pause  |
|    | Exit TV        |    | Exit   |
|    | Menu TV        |    | Menu   |
|    | Violet/Text TV |    | Text   |
|    | Red/Presets TV |    | Red    |
|  | Green/List TV  |  | Green  |
|  | Yellow/Info TV |  | Yellow |
|  | Blue/Guide TV  |  | Blue   |
|  | Up TV          |  | Up     |
|  | Down TV        |  | Down   |
|  | Right/Zoom+    |  | Right  |



 

 


 













 



 
 


TV



**Originalfernbedienung Ersatzfernbedienung**

|   |                 |   |                |
|---|-----------------|---|----------------|
|    | Left/Zoom- TV   |    | Left           |
|    | OK TV           |    | Ok             |
|    | TV              |    | TV/R           |
|    | Demo TV         |    | Pre Ch         |
|    | VCR             |    | Smart          |
|    | SAT             |    | Media          |
|    | DVD             |    | Options        |
|    | AUX             |    | Format         |
|    | AMP             |    | 3D             |
|    | Power AUX       |    | Shift + Power  |
|   | Red/Presets     |   | Shift + Red    |
|  | Green/List AUX  |  | Shift + Green  |
|  | Yellow/Info AUX |  | Shift + Yellow |
|  | Blue/Guide AUX  |  | Shift + Blue   |
|  | Up AUX          |  | Shift + Up     |
|  | OK AUX          |  | Shift + Ok     |
|  | Down AUX        |  | Shift + Down   |

**Originalfernbedienung Ersatzfernbedienung**

|   |                 |   |               |
|---|-----------------|---|---------------|
|    | Right/Zoom+     |    | Shift + Right |
|    | Left/Zoom- AUX  |    | Shift + Left  |
|    | Exit AUX        |    | Shift + Exit  |
|    | Menu AUX        |    | Shift + Menu  |
|    | Violet/Text AUX |    | Shift + Text  |
|    | Return AUX      |    | Shift + Back  |
|    | PR+ AUX         |    | Shift + Ch +  |
|    | PR- AUX         |    | Shift + Ch -  |
|    | 1 AUX           |    | Shift + 1     |
|    | 2 AUX           |    | Shift + 2     |
|   | 3 AUX           |   | Shift + 3     |
|  | 4 AUX           |  | Shift + 4     |
|  | 5 AUX           |  | Shift + 5     |
|  | 6 AUX           |  | Shift + 6     |
|  | 7 AUX           |  | Shift + 7     |
|  | 8 AUX           |  | Shift + 8     |
|  | 9 AUX           |  | Shift + 9     |





 
Originalfernbedienung Ersatzfernbedienung

|  |            |   |                |
|--|------------|---|----------------|
|  | 0 AUX      | + | Shift + 0      |
|  | Play AUX   | + | Shift + Play   |
|  | << AUX     | + | Shift + <<     |
|  | >> AUX     | + | Shift + >>     |
|  | Stop AUX   | + | Shift + Stop   |
|  | Record AUX | + | Shift + Rec    |
|  | Pause AUX  | + | Shift + Pause  |
|  | AV AUX     | + | Shift + AV     |
|  | Demo AUX   | + | Shift + Pre Ch |



 
 
 



 

 
 
 
 
 
 
 

 

 


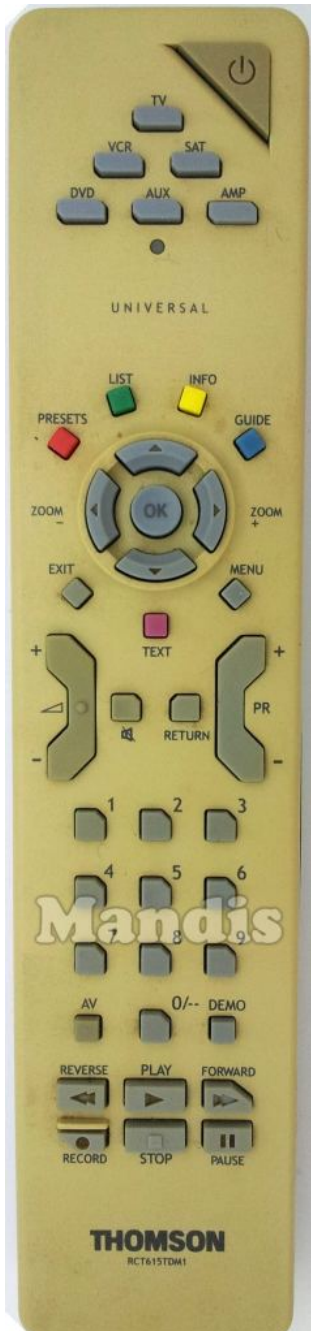









 
Originalfernbedienung Ersatzfernbedienung

|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |






**Originalfernbedienung    Ersatzfernbedienung**

|   |                 |   |        |
|---|-----------------|---|--------|
|    | Power DVD       |    | Power  |
|    | Red/Presets     |    | Red    |
|    | Green/List DVD  |    | Green  |
|    | Yellow/Info DVD |    | Yellow |
|    | Blue/Guide DVD  |    | Blue   |
|    | Violet/Text DVD |    | Text   |
|    | Up DVD          |    | Up     |
|    | Down DVD        |    | Down   |
|    | Right/Zoom+ DVD |    | Right  |
|    | Left/Zoom- DVD  |    | Left   |
|    | OK DVD          |    | Ok     |
|   | Exit DVD        |   | Exit   |
|  | Menu DVD        |  | Menu   |
|  | Vol+            |  | Vol +  |
|  | Vol-            |  | Vol -  |
|  | Mute            |  | Mute   |
|  | Return DVD      |  | Back   |

**Originalfernbedienung    Ersatzfernbedienung**

|   |          |   |        |
|---|----------|---|--------|
|    | PR+ DVD  |    | Ch +   |
|    | PR- DVD  |    | Ch -   |
|    | 1 DVD    |    | 1      |
|    | 2 DVD    |    | 2      |
|    | 3 DVD    |    | 3      |
|    | 4 DVD    |    | 4      |
|    | 5 DVD    |    | 5      |
|    | 6 DVD    |    | 6      |
|    | 7 DVD    |    | 7      |
|    | 8 DVD    |    | 8      |
|    | 9 DVD    |    | 9      |
|   | 0 DVD    |   | 0      |
|  | AV DVD   |  | AV     |
|  | Demo DVD |  | Pre Ch |
|  | Play DVD |  | Play   |
|  | << DVD   |  | <<     |
|  | >> DVD   |  | >>     |





 

 
 
 

 







 

 

 

 

 

 

 







**Originalfernbedienung    Ersatzfernbedienung**

|   |                 |   |                |
|---|-----------------|---|----------------|
|    | Record DVD      |    | Rec            |
|    | Stop DVD        |    | Stop           |
|    | Pause           |    | Pause          |
|    | TV              |    | TV/R           |
|    | VCR             |    | Smart          |
|    | SAT             |    | Media          |
|    | DVD             |    | Options        |
|    | AUX             |    | Format         |
|    | AMP             |    | 3D             |
|    | Power VCR       |    | Shift + Power  |
|   | Red/Presets     |   | Shift + Red    |
|  | Green/List VCR  |  | Shift + Green  |
|  | Yellow/Info VCR |  | Shift + Yellow |
|  | Blue/Guide VCR  |  | Shift + Blue   |
|  | Violet/Text VCR |  | Shift + Text   |
|  | Exit VCR        |  | Shift + Exit   |
|  | Menu VCR        |  | Shift + Menu   |

**Originalfernbedienung    Ersatzfernbedienung**

|   |                |   |               |
|---|----------------|---|---------------|
|    | Up VCR         |    | Shift + Up    |
|    | Down VCR       |    | Shift + Down  |
|    | Right/Zoom+    |    | Shift + Right |
|    | Left/Zoom- VCR |    | Shift + Left  |
|    | OK VCR         |    | Shift + Ok    |
|    | Return VCR     |    | Shift + Back  |
|    | PR+ VCR        |    | Shift + Ch +  |
|    | PR- VCR        |    | Shift + Ch -  |
|    | 1 VCR          |    | Shift + 1     |
|    | 2 VCR          |    | Shift + 2     |
|   | 3 VCR          |   | Shift + 3     |
|  | 4 VCR          |  | Shift + 4     |
|  | 5 VCR          |  | Shift + 5     |
|  | 6 VCR          |  | Shift + 6     |
|  | 7 VCR          |  | Shift + 7     |
|  | 8 VCR          |  | Shift + 8     |
|  | 9 VCR          |  | Shift + 9     |





**Originalfernbedienung Ersatzfernbedienung**

|  |            |   |               |
|--|------------|---|---------------|
|  | 0 VCR      | + | Shift + 0     |
|  | << VCR     | + | Shift + <<    |
|  | >> VCR     | + | Shift + >>    |
|  | Play VCR   | + | Shift + Play  |
|  | AV VCR     | + | Shift + AV    |
|  | Stop VCR   | + | Shift + Stop  |
|  | Record VCR | + | Shift + Rec   |
|  | Pause VCR  | + | Shift + Pause |


 

 

**Originalfernbedienung Ersatzfernbedienung**

|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |


 


 













 

 





 

 

 

 





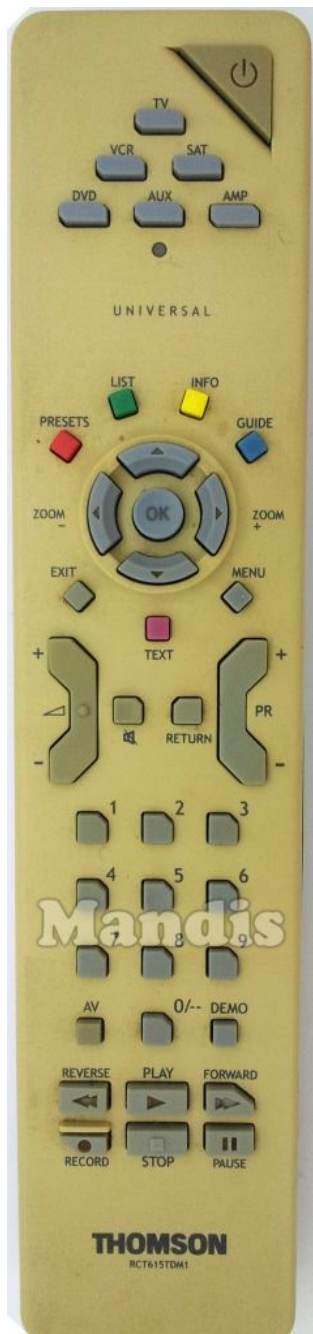 
**Originalfernbedienung    Ersatzfernbedienung**

|   |             |   |         |
|---|-------------|---|---------|
|    | Power       |    | Power   |
|    | TV          |    | TV/R    |
|    | VCR         |    | Smart   |
|    | SAT         |    | Media   |
|    | DVD         |    | Options |
|    | AUX         |    | Format  |
|    | AMP         |    | 3D      |
|    | Red/Presets |    | Red     |
|    | Green/List  |    | Green   |
|    | Yellow/Info |    | Yellow  |
|   | Blue/Guide  |   | Blue    |
|  | Violet/Text |  | Text    |
|  | Up          |  | Up      |
|  | Down        |  | Down    |
|  | Right/Zoom+ |  | Right   |
|  | Left/Zoom-  |  | Left    |
|  | OK          |  | Ok      |

**Originalfernbedienung    Ersatzfernbedienung**

|   |        |   |       |
|---|--------|---|-------|
|    | Exit   |    | Exit  |
|    | Menu   |    | Menu  |
|    | Vol+   |    | Vol + |
|    | Vol-   |    | Vol - |
|    | Mute   |    | Mute  |
|    | Return |    | Back  |
|    | PR+    |    | Ch +  |
|    | PR-    |    | Ch -  |
|    | 1      |    | 1     |
|    | 2      |    | 2     |
|   | 3      |   | 3     |
|  | 4      |  | 4     |
|  | 5      |  | 5     |
|  | 6      |  | 6     |
|  | 7      |  | 7     |
|  | 8      |  | 8     |
|  | 9      |  | 9     |





Originalfernbedienung    Ersatzfernbedienung

|  |        |  |        |
|--|--------|--|--------|
|  | 0      |  | 0      |
|  | AV     |  | AV     |
|  | Demo   |  | Pre Ch |
|  | <<     |  | <<     |
|  | Play   |  | Play   |
|  | >>     |  | >>     |
|  | Record |  | Rec    |
|  | Stop   |  | Stop   |
|  | Pause  |  | Pause  |
|  |        |  |        |
|  |        |  |        |
|  |        |  |        |
|  |        |  |        |
|  |        |  |        |
|  |        |  |        |
|  |        |  |        |
|  |        |  |        |
|  |        |  |        |
|  |        |  |        |
|  |        |  |        |
|  |        |  |        |
|  |        |  |        |
|  |        |  |        |
|  |        |  |        |

Originalfernbedienung    Ersatzfernbedienung

 
 
|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |





 




 

 






 

 
 




 

 



 

 





**Originalfernbedienung Ersatzfernbedienung**

|   |             |   |         |
|---|-------------|---|---------|
|    | Power       |    | Power   |
|    | TV          |    | TV/R    |
|    | VCR         |    | Smart   |
|    | SAT         |    | Media   |
|    | DVD         |    | Options |
|    | AUX         |    | Format  |
|    | AMP         |    | 3D      |
|    | Red/Presets |    | Red     |
|    | Yellow/Info |    | Yellow  |
|    | Blue/Guide  |    | Blue    |
|   | Violet/Text |   | Text    |
|  | Up          |  | Up      |
|  | Down        |  | Down    |
|  | Right/Zoom+ |  | Right   |
|  | Left/Zoom-  |  | Left    |
|  | OK          |  | Ok      |
|  | Exit        |  | Exit    |





 
 

 





 
**Originalfernbedienung Ersatzfernbedienung**

|   |        |   |       |
|---|--------|---|-------|
|    | Menu   |    | Menu  |
|    | Vol+   |    | Vol + |
|    | Vol-   |    | Vol - |
|    | Mute   |    | Mute  |
|    | Return |    | Back  |
|    | PR+    |    | Ch +  |
|    | PR-    |    | Ch -  |
|    | 1      |    | 1     |
|    | 2      |    | 2     |
|    | 3      |    | 3     |
|   | 4      |   | 4     |
|  | 5      |  | 5     |
|  | 6      |  | 6     |
|  | 7      |  | 7     |
|  | 8      |  | 8     |
|  | 9      |  | 9     |
|  | 0      |  | 0     |





Originalfernbedienung Ersatzfernbedienung

|   |        |   |       |
|---|--------|---|-------|
|  | AV     |  | AV    |
|  | <<     |  | <<    |
|  | Play   |  | Play  |
|  | >>     |  | >>    |
|  | Record |  | Rec   |
|  | Stop   |  | Stop  |
|  | Pause  |  | Pause |
|   |        |   |       |
|   |        |   |       |
|   |        |   |       |
|   |        |   |       |
|   |        |   |       |
|   |        |   |       |
|   |        |   |       |
|   |        |   |       |
|   |        |   |       |
|   |        |   |       |
|   |        |   |       |
|   |        |   |       |
|   |        |   |       |
|   |        |   |       |
|   |        |   |       |
|   |        |   |       |
|   |        |   |       |
|   |        |   |       |
|   |        |   |       |

Originalfernbedienung Ersatzfernbedienung

|  |  |  |  |
|--|--|--|--|
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |

