 

 





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Power ON/Off	 Power	Tape 1 Play	 +  Shift + Play
Mute	 Mute	CD Pause	 Pause
Every Pop	 Smart		
Tape 1 Preset	 List		
Vol Rs-/Effect	 Ch -		
Sleep	 Sleep		
Vol Rs+/S.Mode	 Ch +		
Tape 1 Stop	 +  Shift + Stop		
Volume+	 Vol +		
Volume-	 Vol -		
CD Rewind	 <<		
CD F.FWD	 >>		
CD Play	 Play		
Program	 +  Shift + Sleep		
Tape 1 Rec	 +  Shift + Rec		
Tape 1 Rew	 +  Shift + <<		
Tape 1 F.FWD	 +  Shift + >>		

