






 

 





 

 

 





 

 



 





 












 



 

 


 







**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Text		Text
	Sub		Subt
	TV		Smart
	TV / Rad		TV/R
	Audio		Dual

**Originalfernbedienung    Ersatzfernbedienung**

	Page +		Shift + Ch +
	Page -		Shift + Ch -
	Up / Channel +		Up
	Up / Channel +		Ch +
	Down / Channel -		Down
	Down / Channel -		Ch -
	Right / Vol +		Right
	Right / Vol +		Vol +
	Left / Vol -		Left
	Left / Vol -		Vol -
	OK		Ok
	Freeze		Pause
	Menu		Menu
	Browse		Media
	EPG		Guide
	Exit		Exit
	Alt		Back





Originalfernbedienung

Ersatzfernbedienung

	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	i		Info








 

 





 

 

 





 

 






Originalfernbedienung

Ersatzfernbedienung





















 

 













**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Text		Text
	Sub		Subt
	TV		Smart
	TV / Rad		TV/R
	Audio		Dual


 

 




**Originalfernbedienung    Ersatzfernbedienung**

	Page +		Shift + Ch +
	Page -		Shift + Ch -
	Up / Channel +		Up
	Up / Channel +		Ch +
	Down / Channel -		Down
	Down / Channel -		Ch -
	Right / Vol +		Right
	Right / Vol +		Vol +
	Left / Vol -		Left
	Left / Vol -		Vol -
	OK		Ok
	Freeze		Pause
	Menu		Menu
	Browse		Media
	EPG		Guide
	Exit		Exit
	Alt		Back





**Originalfernbedienung    Ersatzfernbedienung**

	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	i		Info

**Originalfernbedienung    Ersatzfernbedienung**