




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute / Dimmer
	V.Format		Picture / Format
			Pause / Step / Freeze
	A/R		Display / Media
	Tv/Radio		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Recall		Back / Return
	0		0

Originalfernbedienung Ersatzfernbedienung

	FAV		Fav / Marker / PC
	Audio		Audio / Lang I/II
	[≡]		Text / Goto
	[...]		Subtitle / EQ
	Timer		Sleep / Timer
	Menu		Menu / Home
	Up		Up
	P+		CH+ / Page+
	Guide		Guide / EPG / -/-
	Left		Left
	Vol-		Vol-
	OK/List		Smart / List
	OK/List		OK
	Right		Right
	Vol+		Vol+
	Exit		Exit / Cancel / Clear
	Down		Down





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	P-		CH- / Page-				
	i		Info / Angle				
	Red/F1		Red / Netflix / Search				
	Green/F2		Green / APP / Repeat				
	Yellow/F3		Yellow / YouTube / Repeat				
	Blue/F4		Blue / Prime Video / Random				
	SAT	+	Shift + 0				
	AUX	+	Shift + 7				

