



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	VF		Format
	AR		3D
	AUX		AV
	TV / Radio		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Previews program		Back

Originalfernbedienung Ersatzfernbedienung

	i		Info
	APP		Media
	Subtitle		Subt
	Text		Text
	Audio		Dual
	FAV		Pre Ch
	EPG		Guide
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK / List		Ok
	Menu		Menu
	Exit		Exit
	V +		Vol +
	V -		Vol -
	Sleep Timer		Sleep





**Originalfernbedienung Ersatzfernbedienung**

	Play List		List
	P +		Ch +
	P -		Ch -
	Red / F1		Red
	Green / F2		Green
	Yellow / F3		Yellow
	Blue / F4		Blue
	Rec		Rec
	Stop		Stop
	S		Smart
	*		Options
<< button icon"/>	<<	<< button icon"/>	<<
	Pause		Pause
	Play		Play
>> button icon"/>	>>	>> button icon"/>	>>
	I<		I<<
	Slow		Shift + Play

**Originalfernbedienung Ersatzfernbedienung**

	> <		Shift + Pause
	>		>>

