 








 


 


 









 
 




 




 

 
 



 




 








 



 




 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	8		8
	5		5
	6		6
	7		7
	9		9
	0		0
	Source		AV
	Recall		Pre Ch
	Menu		Menu
	Exit		Exit
	[<>]		Format

Originalfernbedienung Ersatzfernbedienung

	→□←		3D
	OK		Ok
	Up		Up
	P+		Ch +
	P-		Ch -
	Down		Down
	Right		Right
	Vol+		Vol +
	Left		Left
	Vol-		Vol -
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	[i+]		Info
	Swap		Sleep
	O)/ /		Dual





Originalfernbedienung Ersatzfernbedienung

	[≡?]		Guide
	[▼]		Smart
	[■]/[]		Options
	[≡i]		Media
	[≡]		Text
	[≡o]		Subt
	[O]/[≡x]		TV/R
	[≡◆]		Eject
	[≡+]	 + 	Shift + 3D

Originalfernbedienung Ersatzfernbedienung

