


 

 
 

 





Originalfernbedienung	Ersatzfernbedienung
	Power
	Source
	1
	2
	3
	4
	5
	6
	7
	8
	9
	TV
	0
	Recall
	Vol+
	Mute
	PR+

Originalfernbedienung	Ersatzfernbedienung
	Vol-
	World/Internet
	PR-
	Menu
	Q.Menu
	Up
	Left
	OK
	Right
	Down
	Back
	Exit
	i
	Camera/Music/Ph
	Guide
	*/o
	*/o..



