



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Info		Info / Angle
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Source		AV / Input / RDS
	0		0
	O)/I-II/Audio		Audio / Lang I/II
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear

Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	CH+		CH+ / Page+
	Index		Display / Media
	Vol+		Vol+
	CH-		CH- / Page-
	List		Smart / List
	Vol-		Vol-
	♥		Fav / Marker / PC
	Sleep		Sleep / Timer
	EPG		Guide / EPG / -/-
	Recall		Back / Return
	Red		Red / Netflix / Search
	<<		<< / Tune-





Originalfernbedienung Ersatzfernbedienung

	Green		Green / APP / Repeat
	>>		>> / Tune+
	Yellow		Yellow / YouTube / Repeat
	I<<		I<< / Preset-
	Blue		Blue / Prime Video / Random
	>>I		>>I / Preset+
	[≡]		Text / Goto
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	[≡+]		Zoom / Size
	Stop/Still		Stop / Hold
	Radio		TV/Radio /
	[≡◆]/[++]		Setup / OPT /
	[≡x]		Picture / Format
	[≡o]/Subtitle		Subtitle / EQ
	DMP		D.Menu / Top
	Rec		Rec / Rec Mode

Originalfernbedienung Ersatzfernbedienung







**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Mute		Mute / Dimmer
	Text / Play/Pause		Play / Slow
	Text / Play/Pause		Pause / Step / Freeze
	Stop / Still		Stop / Hold
	Rec		Rec / Rec Mode
	Audio I/II		Audio / Lang I/II
	Subtitle / [≡o]		Subtitle / EQ
	[≡x]		Picture / Format
	Size / Aspect		Zoom / Size
	Sleep		Sleep / Timer
	Radio		TV/Radio /
	DMP		D.Menu / Top
	Source		AV / Input / RDS
	Menu		Menu / Home
	Up		Up
	Info		Info / Angle

**Originalfernbedienung    Ersatzfernbedienung**

	Left		Left
	Enter		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Recall		Back / Return
	Vol +		Vol+
	List		Smart / List
	CH +		CH+ / Page+
	Vol -		Vol-
	Index		Display / Media
	CH -		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5




**Originalfernbedienung Ersatzfernbedienung**

	6		6
	7		7
	8		8
	9		9
	EPG		Guide / EPG / -/--
	0		0
	Fav		Fav / Marker / PC
	Red / <<		Red / Netflix / Search
	Green / >>		Green / APP / Repeat
	Yellow /  <<		Yellow / YouTube / Repeat
	Blue / >>		Blue / Prime Video / Random
	Text / Play/Pause		Shift + Play /
	Red / <<		Shift + Red / Netflix /
	Green / >>		Shift + Green / APP /
	Yellow /  <<		Shift + Yellow / YouTube /
	Blue / >>		Shift + Blue / Prime

**Originalfernbedienung Ersatzfernbedienung**


