



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power		Power
	I<<		I<<
	Eject		Eject
	<<		<<
	>>		>>
	>>I		>>I
	Play		Play
	Pause		Pause
	Stop		Stop
	TV/TXT/Langua		Text
	Cancel/Zoom	 + 	Shift + Eject
	Reveal/Subtitle		3D
	Hold/Menu		Smart
	Size/Angle		Format
	Subpage/Title		Options
	Index/Goto		Media
	Red/Program		Red
	Green/Slow		Green
	Yellow/Repeat		Yellow
	Blue/A-B		Blue
	CH+		Ch +
	CH-		Ch -
	Tv-Menu		Menu
	TV/AV		AV
	Vol+		Vol +
	Vol-		Vol -
	DTV	 + 	Shift + Smart
	DVD Setup		D. Menu
	Exit		Exit
	Display	 + 	Shift + Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left



