 




 
 





 




 
 

 
 
 
 

 


 
 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	<<		<<
	>>		>>
	Stop		Stop
	Play/Pause		Play
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8

Originalfernbedienung Ersatzfernbedienung

	9		9
	0		0
	i		Info
	Rec		Rec
	Vol+		Vol +
	Vol-		Vol -
	CH+		Ch +
	CH-		Ch -
	Guide		Guide
	Mute		Mute
	FAV		Pre Ch
	Text		Text
	Menu		Menu
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Left		Left
	OK		Ok
	Back		Back
	Lang(AD)		Dual
	Subtitle		Subt
	Tv/Radio		TV/R

