



Originalfernbedienung Ersatzfernbedienung

	POWER		Power
	MENU		Menu
	UP		Up
	LEFT		Left
	ENTER		Enter
	RIGHT		Right
	DOWN		Down
	KEYSTONE UP		Shift + Up
	KEYSTONE		Shift + Down
	VOLUME+		Vol + / Page +
	VOLUME-		Vol - / Page -
	FREEZE		Freeze / Timer
	AUTO		Auto
	SOURCE		Source
	MUTE		Blank / Mute

Originalfernbedienung Ersatzfernbedienung

