


















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	APP		Shift + Green / APP / REPEAT
	APP		Display / Media
	List		Smart / List
	EPG		Guide / EPG / -/--
	i		Info / Angle
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Vol+		Vol+
	Down		Down
	CH+ / PG+		CH+ / Page+
	Vol-		Vol-
	CH- / PG-		CH- / Page-
	Mute		Mute / Dimmer
	Menu		Menu / Home

Originalfernbedienung Ersatzfernbedienung

	Back		Back / Return
	Exit		Exit / Cancel / Clear
	Options		Setup / OPT /
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	AV		AV / Input / RDS





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	0		0				
	Text		Text / Goto				

