

 

 

 

 

 



 



 





 







 





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------|---|---------------------------|
|  | Open/Close |  | Eject / Surround |
|  | Standby |  | Power |
|  | Source |  | AV / Input / RDS |
|  | Function |  | D.Menu / Top |
|  | TFT On/Off |  | Exit / Cancel / Clear |
|  | Mute |  | Mute / Dimmer |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | +10 |  | Shift + Guide / EPG / -/- |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------|---|-----------------------|
|  | Setup |  | Setup / OPT / |
|  | Return |  | Back / Return |
|  | Up |  | Up |
|  | Pre/Tun |  | Fav / Marker / PC |
|  | Left |  | Left |
|  | Enter |  | OK |
|  | Right |  | Right |
|  | Memo |  | Sleep / Timer |
|  | Down |  | Down |
|  | Auto |  | Rec / Rec Mode |
|  | Pause/Step |  | Pause / Step / Freeze |
|  | Play |  | Play / Slow |
|  | Stop |  | Stop / Hold |
|  | Vol- |  | Vol- |
|  | Vol+ |  | Vol+ |
|  | CH- |  | CH- / Page- |
|  | CH+ |  | CH+ / Page+ |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|----------|--|----------------------------|
| | I<< | | I<< / Preset- |
| | >>I | | >>I / Preset+ |
| | << | | << / Tune- |
| | >> | | >> / Tune+ |
| | Zoom | | Zoom / Size |
| | Prog | | Shift + TV/Radio / Program |
| | Slow | | Shift + Play / |
| | A-B | | Yellow / YouTube / Repeat |
| | Goto | | Text / Goto |
| | Title | | Sound / Title |
| | Menu | | Menu / Home |
| | Display | | Display / Media |
| | Subtitle | | Subtitle / EQ |
| | N/P | | Red / Netflix / Search |
| | Language | | Audio / Lang I/II |
| | Angle | | Info / Angle |
| | Resume | | Smart / List |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|----------|--|-----------------------------|
| | Repeat | | Green / APP / Repeat |
| | R/L | | Blue / Prime Video / Random |
| | 4:3/16:9 | | Picture / Format |
| | EPG | | Guide / EPG / -/-- |
| | Tv/Radio | | TV/Radio / |
| | Video | | Shift + 4 |
| | EQ | | Shift + Subtitle / EQ |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

