



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	6		6
	5		5
	7		7
	8		8
	9		9
	0		0
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Repeat		Text
	Shuffle		Media
	Play		Play

Originalfernbedienung Ersatzfernbedienung

	Pause		Pause
	Stop		Stop
	>>		>>
	<<		<<
	>>		>>
	<<		<<
	Option		Options
	Display		Info
	Enter		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Folder Up		Ch +
	Folder Down		Ch -
	Clear		Exit
	Sleep		Sleep



