 
 

 

 


 





 


 


 
 

 





Originalfernbedienung Ersatzfernbedienung

	Standby/On		Power
	1/5Beam		1
	2/ST+3Beam		2
	3/3Beam		3
	4/Stereo		4
	5/Target		5
	6		6
	7/Music		7
	8/Movie		8
	9/Vol Mode		9
	0/Sports		0
	+10/Off		Guide / EPG / -/--
	Surround		Eject / Surround
	Up		Up
	Down		Down
	Right		Right
	Left		Left

Originalfernbedienung Ersatzfernbedienung

	AUX		Smart / List
	Enter		OK
	Menu		Menu / Home
	Return		Back / Return
	Test		Text / Goto
	CH Level		Info / Angle
	Vol+		Vol+
	Vol-		Vol-
	Mute		Mute / Dimmer
	(o)		Sound / Title
	Input Mode		AV / Input / RDS
	Sleep		Sleep / Timer
	Power AUX		Shift + Power
	1 AUX		Shift + 1
	2 AUX		Shift + 2
	3 AUX		Shift + 3
	4 AUX		Shift + 4





Originalfernbedienung Ersatzfernbedienung

TARGET 5	5 AUX	SHIFT + 5	SHIFT + 5	Shift + 5
6	6 AUX	SHIFT + 6	SHIFT + 6	Shift + 6
MUSIC 7	7 AUX	SHIFT + 7	AUX - HDD 7	Shift + 7
MOVIE 8	8 AUX	SHIFT + 8	USB 8	Shift + 8
VOL MODE 9	9 AUX	SHIFT + 9	BLUETOOTH 9	Shift + 9
SPORTS 0	0 AUX	SHIFT + 0	HDMI - SAT 0	Shift + 0

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

POWER	Power		Power
5BEAM	1		1
ST+3BEAM	2		2
3BEAM	3		3
STEREO	4		4
TARGET	5		5
	6		6
MUSIC	7		7
MOVIE	8		8
VOL. MODE	9		9
SPORTS	0		0
CH	CH+		CH+ / Page+
CH	CH-		CH- / Page-
	Tv Vol+		Vol+
	Tv Vol-		Vol-
	Tv Input		AV / Input / RDS
	Tv Mute		Mute / Dimmer

 


Originalfernbedienung Ersatzfernbedienung

	Input 1		Smart / List
	Input 2		Display / Media





 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide / EPG / -/--
	Menu		Menu / Home
	Return		Back / Return
	Play		Play / Slow
	<<		<< / Tune-
	>>		>> / Tune+

Originalfernbedienung Ersatzfernbedienung

	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	STB		Shift + 3





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Play		Play / Slow
	<<		<< / Tune-
	>>		>> / Tune+
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze

Originalfernbedienung Ersatzfernbedienung

