



 

































 



 





 









Originalfernbedienung Ersatzfernbedienung

 Standby / On	 Power
 Tape Rec / Pause	 Shift + Rec / Rec Mode
 Tape Deck A/B	 Display / Media
 Tape <<	 Shift + << /
 Tape Play	 Shift + Play /
 Tape >>	 Shift + >> /
 Tape DIR A	 Red / Netflix / Search
 Tape Stop	 Shift + Stop /
 Tape DIR B	 Green / APP / Repeat
 CD Disc Skip	 Smart / List
 CD I<<	 I<< / Preset-
 CD Play	 Play / Slow
 CD >>I	 >>I / Preset+
 CD <<	 << / Tune-
 CD Pause/Stop	 Pause / Step / Freeze
 CD Pause/Stop	 Stop / Hold
 CD >>	 >> / Tune+

Originalfernbedienung Ersatzfernbedienung

 Tuner Preset -	 CH- / Page-
 Tuner Preset +	 CH+ / Page+
 Tuner A/B/C/D/E	 Info / Angle
 MD	 2
 Tape	 5
 CD / DVD	 3
 AUX	 7
 Phono	 4
 Tuner	 6
 Volume -	 Vol-
 Volume +	 Vol+

