

 
 







 

 







 



 
 
 



 


 

 
 
 
 
 
 
 




 
 
### Originalfernbedienung Ersatzfernbedienung

	System Power		Power
	Standby		Shift + Power
	Sleep		Sleep
	PHONO		Shift + 1
	TUNER		Shift + 2
	CD		Shift + 3
	MULTI CH IN		Shift + 4
	V-AUX		Shift + 5
	CBL / SAT		Shift + 6
	MD / TAPE		Shift + 7
	CD-R		Shift + 8
	DTV		Shift + 9
	VCR 1		Shift + Guide
	DVR / VCR2		Shift + 0
	DVD		Shift + Pre Ch
	Preset+		Ch +
	Preset-		Ch -

### Originalfernbedienung Ersatzfernbedienung

	A/B/C/D/E		Smart
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Level		Media
	Set Menu		Menu
	Up		Up
	Left		Left
	Select		Ok
	Right		Right
	Down		Down
	Test		Text
	On Screen /		Info
	Pure Direct		Guide
	Night		0
	Straight Effect		Dual
	Stereo		1

 

 
 
 
 

 

 


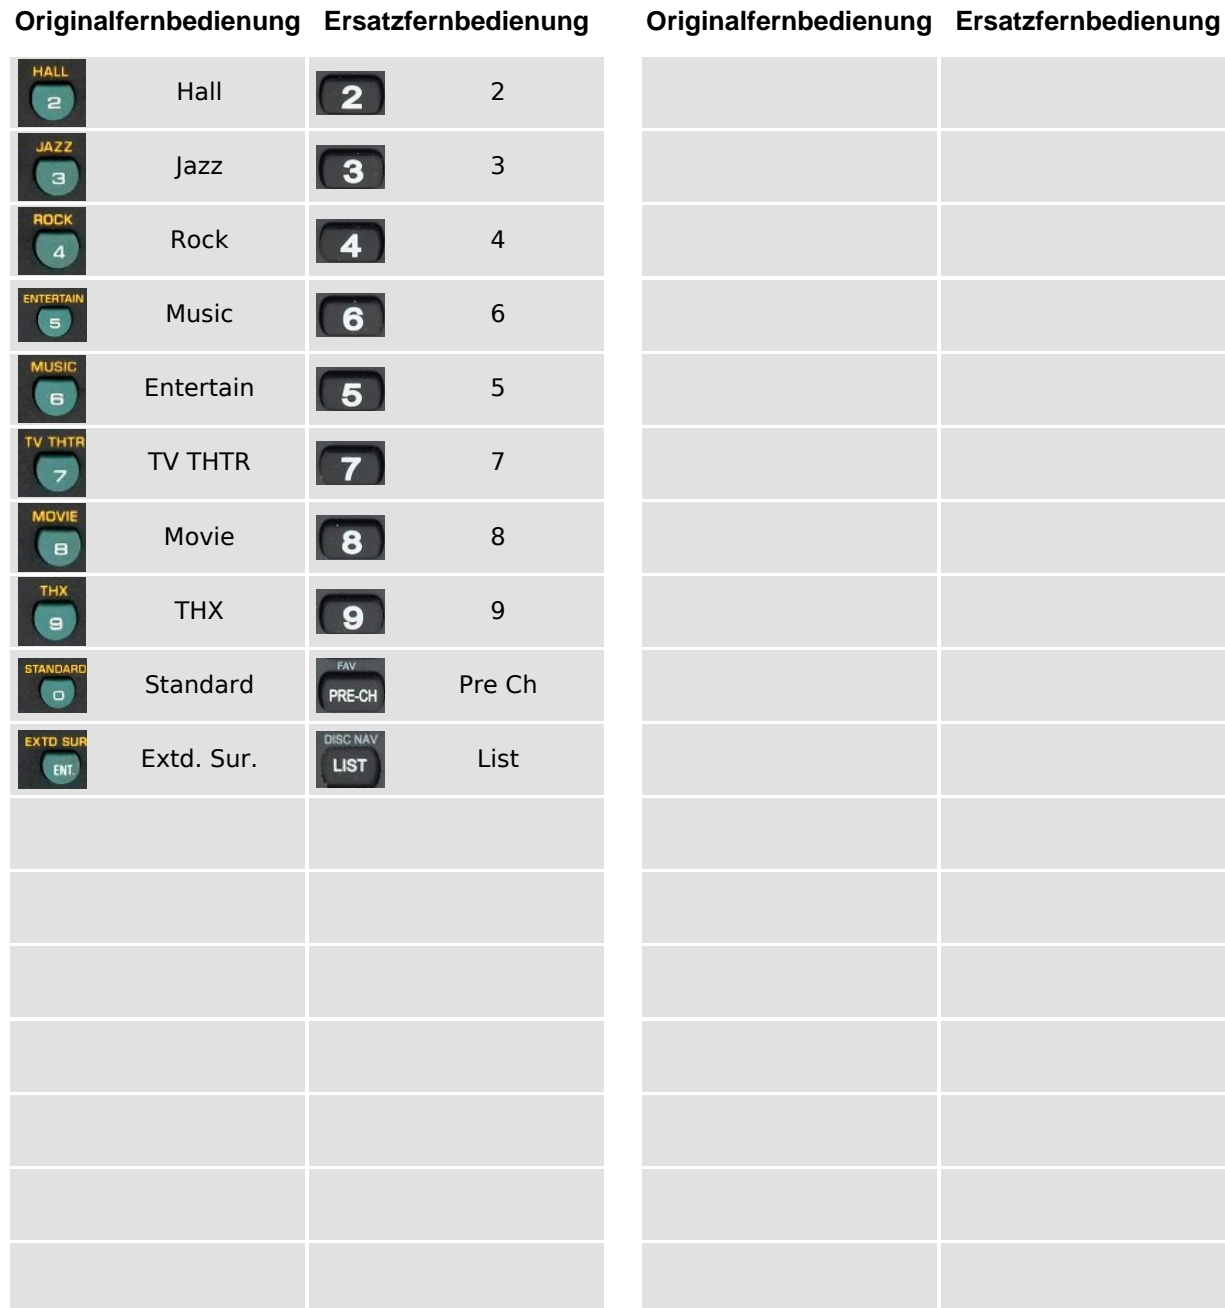
 


 
 
 
 
 
 





 


 
 
 











 
















### Originalfernbedienung Ersatzfernbedienung

	System Power		Power
	Standby		Shift + Power
	Sleep		Sleep
	Volume +		Vol +
	Volume -		Vol -
	Mute		Mute
	A/B/C/D/E		Smart
	Title Tuner		Media
	Menu Tuner		Menu
	Up Tuner		Up
	Left Tuner		Left
	Select Tuner		Ok
	Right Tuner		Right
	Down Tuner		Down
	Return Tuner		Back
	Display Tuner		Info
	1 Tuner		1

### Originalfernbedienung Ersatzfernbedienung

	2 Tuner		2
	3 Tuner		3
	4 Tuner		4
	5 Tuner		5
	6 Tuner		6
	7 Tuner		7
	8 Tuner		8
	9 Tuner		9
	0 Tuner		0
	ENTER Tuner		Pre Ch

