 


 
 

 



 






 



 









 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Standby	 + 	Shift + Power
	Volume+		Vol +
	Volume-		Vol -
	Mute		Mute
	Up / Preset/CH+		Up
	Down / Preset/CH-		Down
	Right /		Right
	Left / A/B/C/D/E-		Left
	Menu/Set Menu/Srch Mode		Menu
	Enter		Ok
	Return/Memory		Back
	Title/Level/Band		TV/R
	Display		Info
	Audio		Dual
	Pure Direct		Smart
	Straight		Media

Originalfernbedienung Ersatzfernbedienung

	Classical		1
	Live/Club		2
	Entertain		3
	Movie		4
	Stereo		5
	Enhancer		6
	Sur.Decode		7
	Parameter		8
	Multi CH In		9
			0
	Sleep		Pre Ch
	<</Info		<<
	>>/Eon		>>
	I<</Mode PTY		I<<
	>>I/PTY Seek		>>I
	Scene 1		Red
	Scene 2		Green





Originalfernbedienung Ersatzfernbedienung

	Scene 3		Yellow
	Scene 4		Blue
	Tuner		Shift + 1
	C		Shift + Yellow
	V-AUX/Dock		Shift + 3
	DTV/CBL		Shift + 4
	CD		Shift + 5
	MD/CD-R		Shift + 6
	DVD		Shift + 7
	DVR		Shift + 8
	VCR		Shift + 9
	Phono		Shift + Pre Ch

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Volume+		Vol +
	Volume-		Vol -
	Mute		Mute
	Band		TV/R
	Search Mode		AV
	Memory		Back
	Preset Up		Up
	Preset Down		Down
	Right A/B/C/D/E		Right
	Left A/B/C/D/E		Left
	Enter		Ok
	Display		Info
	1		1
	2		2
	3		3
	4		4

Originalfernbedienung Ersatzfernbedienung

	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	ENT		Pre Ch
	Info		Red
	PTY Seek Start		Blue
	Eon		Green
	Mode PTY Seek		Yellow
	Power		Shift + Power
	Up V-AUX/Dock		Shift + Up
	Down		Shift + Down
	Right V-AUX/Dock		Shift + Right
	Left		Shift + Left
	Enter V-AUX/Dock		Shift + Ok




Originalfernbedienung Ersatzfernbedienung

AUDIO	Audio V-AUX/Dock	SOUND DUAL	Dual
DISPLAY	Display	SHIFT + DISPLAY INFO	Shift + Info
RETURN MEMORY	Return	SHIFT + RETURN BACK	Shift + Back
SET MENU MENU SRCH MODE	Menu	TOP MENU MENU	Menu
LEVEL TITLE BAND	Title V-AUX/Dock	SHIFT + SEARCH TV/R	Shift + TV/R
CLASSICAL 1	1 V-AUX/Dock	SHIFT + 1	Shift + 1
LIVE/CLUB 2	2 V-AUX/Dock	SHIFT + 2	Shift + 2
ENTERTAIN 3	3 V-AUX/Dock	SHIFT + 3	Shift + 3
MOVIE 4	4 V-AUX/Dock	SHIFT + 4	Shift + 4
STEREO 5	5 V-AUX/Dock	SHIFT + 5	Shift + 5
ENHANCER 6	6 V-AUX/Dock	SHIFT + 6	Shift + 6
SUR DECODE 7	7 V-AUX/Dock	SHIFT + 7	Shift + 7
PARAMETER 8	8 V-AUX/Dock	SHIFT + 8	Shift + 8
MULTI CH IN 9	9 V-AUX/Dock	SHIFT + 9	Shift + 9
0	0 V-AUX/Dock	SHIFT + 0	Shift + 0
+10	+10	SHIFT + - / - GUIDE	Shift + Guide
SLEEP ENT	ENT	SHIFT + FAV PRE-CH	Shift + Pre Ch

Originalfernbedienung Ersatzfernbedienung

INFO	<< V-AUX/Dock	<<	<<
MODE - PTY S	<<	⏮	<<
Y SEEK - START	>>	⏭	>>
EON	>> V-AUX/Dock	>>	>>
REC	Rec V-AUX/Dock	REC MODE	Rec
■	Stop	■	Stop
⏸	Pause	⏸	Pause
▶	Play	PLAY MODE ▶	Play



 



V-AUX/Dock



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Standby		Shift + Power
	Tuner		1
	C		Yellow
	V-AUX/Dock		3
	DTV/CBL		4
	CD		5
	MD/CD-R		6
	DVD		7
	DVR		8
	VCR		9
	Phono		Pre Ch
	Volume+		Vol +
	Volume-		Vol -
	Mute		Mute
	<</Info		<<
	>>/Eon		>>

Originalfernbedienung Ersatzfernbedienung

	I<</Mode PTY		I<<
	>>I/PTYSeek		>>I





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Standby	+	Shift + Power
	Tuner		1
	C		Yellow
	V-AUX/Dock		3
	DTV/CBL		4
	CD		5
	DVD		7
	DVR		8
	VCR		9
	Phono		Pre Ch
	Volume+		Vol +
	Volume-		Vol -
	Mute		Mute
	<</Info		<<
	>>/Eon		>>
	I<</Mode PTY		I<<

Originalfernbedienung Ersatzfernbedienung

	>>I/PTY Seek		>>I
--	--------------	--	-----



Seek